


WALL-MOUNTED BASIN


INSTALLATION INSTRUCTIONS



SUGGESTED TOOLS

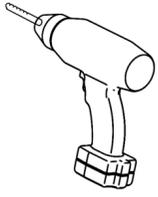

DRILL



LEVEL




TAPE MEASURE



SILICONE SEALANT



PENCIL



SCREWDRIVER



DRILL BIT


WARNING!

This product is fragile and can break, chip, or cause injury if handled recklessly. Please consult with a professional when installing.

Before installing, read entire instructions. Observe all local building and safety codes. We recommend consulting a professional if you are unfamiliar with this type of installation. Streamline accepts no liability for any damages to the floor, walls, plumbing, or for personal injury during installation.


1

Using a pencil, mark holes on the wall where you would like to position the brackets. Please ensure that they are fixed on an even level.

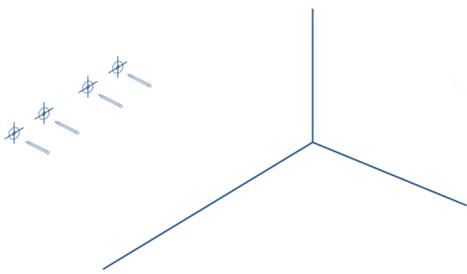


2

Drill holes where you have created the markings.

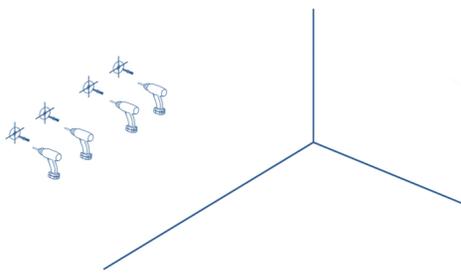


3

Using a screwdriver, fix the brackets onto the wall.

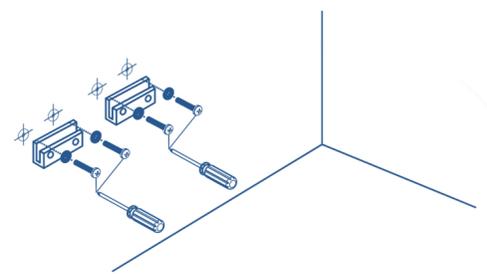


4

Assemble the faucet and drain on the basin and connect the faucet pipe and drain pipe to the valve as per the manufacturer's instructions.

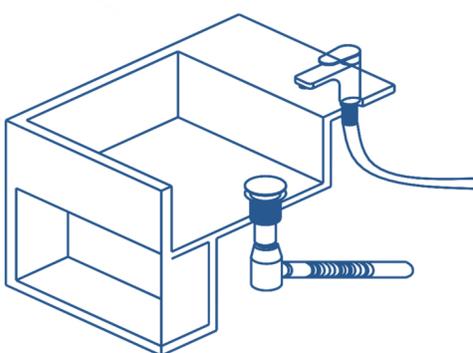


5

Hang the basin on the wall, ensuring that it is affixed to the brackets and level.

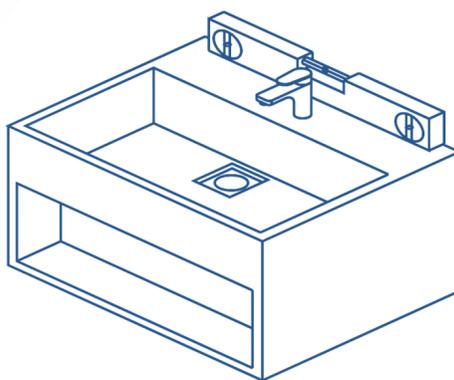


6


Finally, apply silicone sealant in between the wall and the top of the basin in order to secure it.

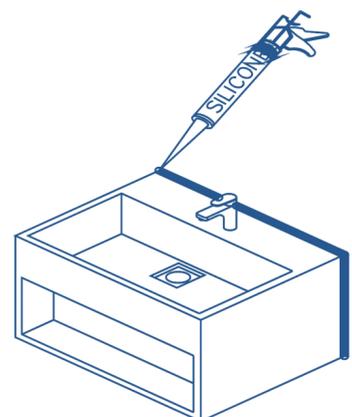

OUTILS SUGGÉRÉS

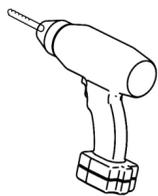

DRILL



NIVEAU




MÈTRE RUBAN



COLLE SILICONE



CRAYON À PAPIER



TOURNEVIS



PERCEUSE

ATTENTION!!


Ce produit est fragile et peut se casser ou blesser si manipuler dangereusement. Veuillez consulter un professionnel avant installation.

Avant installation, lire le manuel. Respecter les normes locales. Nous conseillons de consulter un professionnel si vous ne connaissez pas ce genre d'installation. Streamline n'est pas responsable pour des dégâts au sol, murs, plomberie ou blessures durant l'installation.

Le sol et les murs doivent être droits. Réparez ou remplacez le sous-sol si nécessaire


1

En utilisant un crayon à papier, tracer les trous sur le mur, là où vous souhaitez positionner les attaches. Assurez-vous qu'elles soient toutes au même niveau.

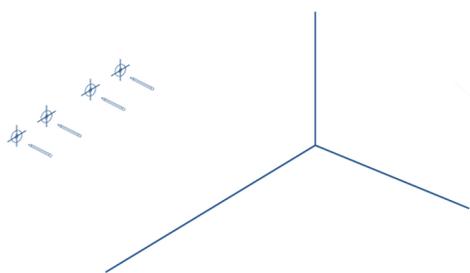


2

Percez les trous aux emplacements définis.

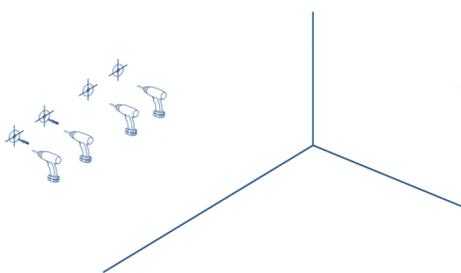


3

Avec un tournevis, fixez les attaches sur le mur.

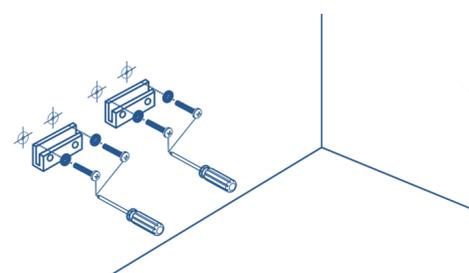


4

Assemblez le drain et le robinet sur le bac et connectez le tuyau de robinet et le tuyau de drain aux embouchures en suivant les instructions constructeur.

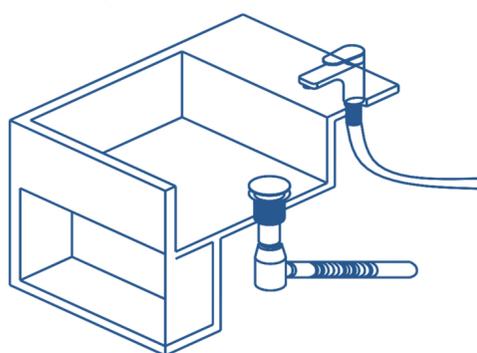

5

Accrochez le bac au mur, en s'assurer qu'il est bien fixé sur les attaches et droit.

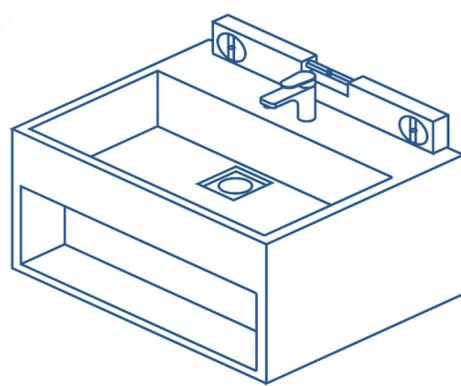

6

Enfin, appliquez le fixateur silicone entre le mur et le haut du bac pour sécuriser l'attache.

